

Sentinel™ Earth Fault Indicator

Model Range Overview

MODEL ORDER CODE	POWER SUPPLY	INDICATION METHOD	AUX RELAY	REMOTE INDICATE CAPABLE	RESET METHOD	IP RATING
EFI-MLZ	Mains	LED	YES	YES	Mains	IP65
EFI-BLZ	Battery	LED	YES	YES	Timer:4/8hrs	IP65
EFI-CLZ	Current	LED	YES	YES	Current	IP65
EFI-MFZ	Mains	Flag	YES	YES	Mains	IP65
EFI-BFZ	Battery	Flag	YES	YES	Timer:4/8 hrs	IP65
EFI-CFZ	Current	Flag	YES	YES	Current	IP65
EFI-MF	Mains	Flag			Mains	IP67